



# SERVICE MANUAL

## GLYCOL CHILLERS

BEF-02

BEF-03

BEF-04

BEF-05

BEF-075

BEF-08

Version 1.6 Release January 2024 – All rights reserved

**CONTENTS**

1. Specifications .....	3
1.1. Circulation pump motor - power circuit .....	4
1.1.1. Independent circuit.....	4
2. Handling and installation .....	4
2.1. Placement.....	5
2.2. BEF-02 installation.....	5
2.3. BEF-04, BEF-05 and BEF-075 installation .....	5
2.4. Adjusting the temperature controller.....	6
3. Maintenance .....	6
4. Servicing .....	7
4.1. Replace circulation pump – BEF-02 & BEF-03.....	7
4.2. Replace circulation pump – BEF-04, BEF-05 & BEF-075.....	7
4.3. Replace motor of circulating pump – BEF-04, BEF-05 & BEF-075.....	7
4.4. Replace temperature controller .....	8
4.5. Replace temperature controller relay.....	8
5. Troubleshooting .....	9
6. Electrical wiring diagrams.....	10
6.1. Electrical diagram BEF-02 & BEF-03.....	10
6.2. Electrical diagram BEF-04 , BEF-05 and BEF-075 .....	10
6.3. Electrical diagram BEF-08 .....	11



1. SPECIFICATIONS

SPECIFICATIONS								
Model	BEF-02	BEF-03	BEF-04	BEF-05	BEF-075	BEF-08		
Cooling distance (ft.)	<b>75</b>	<b>130</b>	<b>150</b>	<b>250</b>	<b>350</b>	<b>350</b>		
Pump flow(GPH)	200 head pressure 0'	250 head pressure 0'	50	50	50	50		
Compressor power (HP)	1/3	1/2	1/2	1/2	3/4	3/4		
Voltage (V) – 60Hz	120	120	120	120	120	240		
Plug type	NEMA 5-15P	NEMA 6-15P						
RLA (A) – chiller only (Running)	8.0	8	8.5	9.8	13.5	6,5		
Min. circuit Ampacity (A) - Chiller	11	10.7	10.5	12.8	14.5	8.7		
Max. circuit Fuse - Chiller	15	15	20.0	20.0	25.0	15		
RLA (A) - circuit Ampacity (A) circulation motor/pump (Running)	1.0	1.5	6.0	6.0	6.0	6.0		
Recommended circuit Ampacity (A) circulation motor/pump			*See section 1.1					
Refrigerant	R513	R513	R513	R513	R513	R513		
Refrigerant capacity (oz.)	9.25	14.0	17.0	11.5	19.5	19.5		
Normal refrigeration operating pressure (PSI)	18 (low) 135 (high)	18 (low) 135 (high)	18 (low) 135 (high)	18 (low) 135 (high)	18 (low) 150 (high)	18 (low) 150 (high)		
BTUs/H (evap. @ 80°F)	2560	3370	3280	5080	6070	6070		
Dimensions W x D x H	1 pump	16.5" x 20" x 20"	16.5" x 20" x 20"	20.75" x 23.5" x 30.0"	20.75" x 23.5" x 30.0"	20.5" x 23.5" x 30.0"	20.5" x 23.5" x 30.0"	
	2 pumps			27,25" x 23.5" x 30.0"				
	3 pumps					34,0" x 23.5" x 30.0"	34,0" x 23.5" x 30.0"	
Weight (lbs.)	1 pump	61	70	121	130	149	149	
	2 pumps			136	145	164	164	
	3 pumps					180	180	
Water bath capacity (US gal)	4.5	4.5	17	17	17	17		

## 1.1. CIRCULATION PUMP MOTOR - POWER CIRCUIT

### 1.1.1. Independent circuit

Circulation pump motor shall be powered by a circuit independent of the chiller. This situation is preferable since in case of power surge on the chiller the circulation will continue to run and system can be serviced and put back in operation without affecting cooling operation.

**Single motor Max. circuit Fuse : 15 amp**

**Dual motor Max. circuit Fuse : 20 amp**

**Triple motor Max. circuit Fuse : 25 amp**

## 2. HANDLING AND INSTALLATION

1. Unpack the unit close to the installation area.
2. Inspect the unit to make sure there is no apparent damage.
3. Cautiously position the unit into the wanted position. Two(2) person are required to lift the unit.

**NOTE: Do not move the unit without lifting it. Damage could occur to the legs of the unit if pushed.**

**NOTE: Do not lift any unit by the refrigeration lines or components. Please use designated handles.**

**NOTE: For BEF 075, the shroud must be removed to access the lifting handles. Make sure that the shroud is properly secured once the placement is completed.**

## 2.1. PLACEMENT

- It is not advised to place a power pack on top of a walk-in cooler.
- It is not advised to place a power pack outside without protections.
- Always make sure a minimum clearance of 24 inches around and above the power pack. This is necessary for proper air flow and servicing.
- Ambient temperature ranges from 60°F to 85°F for all models.
- Make sure the unit is installed in a properly ventilated area.
- Unit must be connected to a ground fault circuit breaker.
- Power pack and pump must have their own dedicated electrical circuit.

## 2.2. BEF-02 INSTALLATION

1. Clamp and insulate both glycol lines to the pump outlet and to the unit return fitting.
2. Clean the reservoir.
3. Fill the reservoir with **CBS propylene glycol** solution (mixed 2 parts water to 1 part glycol).
4. Place the cover on the unit.
5. Plug the pump in the electrical box on the unit.
6. Plug the unit to an appropriate electrical circuit. This task should be executed by a professional electrician in compliance with national electrical standards.
7. Inspect the unit for any leakage.
8. Glycol temperature should be adjusted to 27°F. Set point should be reached within a few hours.

NOTE: To adjust the glycol temperature, please see section 2.4.

## 2.3. BEF-04, BEF-05 AND BEF-075 INSTALLATION

1. Remove the upper deck from the unit.
2. Clean the reservoir and remove any dust or contaminant.
3. Connect the overflow fitting to a proper external reservoir or drain.
4. Clamp and insulate both glycol lines to the pump outlet and to the unit return fitting. Repeat this step for each pump.
5. Fill the reservoir with **CBS propylene glycol** solution (mixed 2 parts water to 1 part glycol).
6. Place back the upper deck on the unit.
7. Plug the unit and the pump to an appropriate electrical circuit. This task should be executed by a professional electrician in compliance with national electrical standards.
8. Inspect the unit for any leakage.
9. Glycol temperature should be adjusted to 27°F. Set point should be reached within a few hours.

NOTE: To adjust the glycol temperature, please see section 2.4.

## 2.4. ADJUSTING THE TEMPERATURE CONTROLLER

*Instructions for all models*



### INSTRUCTIONS

PRESS **SET** UNTIL DISPLAY IS FLASHING. SELECT THE PARAMETER TO CHANGE BY PRESSING **SET**

1. **E3** – ADJUST TEMPERATURE DIFFERENTIAL  
SELECT THE VALUE USING THE ARROWS.
2. **E4** – ADJUST STARTING DELAY  
SELECT THE VALUE USING THE ARROWS (MINUTE)
3. **C1** – CHANGE UNITS  
**F** = FAHRENHEIT OR **C** = CELSIUS

TO ADJUST THE SET POINT, PRESS **SET** AND USE THE ARROWS TO SELECT TEMPERATURE

## 3. MAINTENANCE

1. Check the glycol level each month to make sure it's still within 0.5 inch below the overflow fitting.
2. If the level is too low, add **CBS propylene glycol** solution (mixed 2 parts water to 1 part glycol).
3. If there are any signs of ice in the unit, give time to the ice to melt and change all the solution with a fresh solution mixed as indicated in the installation instructions.
4. Drain and replace the propylene glycol solution every 24 months.
5. Clean the condenser every thirty (30) days. Be careful to not damage the aluminum fins. NEVER brush sideways.

## **4. SERVICING**

### **4.1. REPLACE CIRCULATION PUMP – BEF-02 & BEF-03**

1. Unplug the pump and the unit from their electrical circuit.
2. Pinch the glycol lines to avoid any dumping.
3. Disconnect the glycol line from the pump.
4. Remove the pump mounting screws (4).
5. Replace the defective circulation pump by a new one.
6. Tighten the mounting screws (4).
7. Connect the glycol line and secure with a stainless steel ear clamp.
8. Release the glycol lines.
9. Reconnect the unit and pump to their electrical circuit.

### **4.2. REPLACE CIRCULATION PUMP – BEF-04, BEF-05 & BEF-075**

1. Unplug the motor and the unit from their electrical circuit.
2. Pinch the glycol lines to avoid any dumping.
3. Remove the pump insulation. Disconnect the glycol line from the pump.
4. Remove the pump mounting screw (1).
5. Replace the defective circulation pump and the damper coupling by new ones.
6. Tighten the pump mounting screw (1).

NOTE: Make sure the pump is properly aligned with the damper coupling and the motor.

7. Connect the glycol lines and secure with a stainless steel ear clamp.
8. Release the glycol lines.
9. Reconnect the unit and the motor to their electrical circuit.

### **4.3. REPLACE MOTOR OF CIRCULATING PUMP – BEF-04, BEF-05 & BEF-075**

1. Unplug the motor and the unit from their electrical circuit.
2. Remove the pump mounting screw (1).
3. Remove the motor mounting screws (4).
4. Replace the defective motor pump and the damper coupling by new ones.
5. Tighten the motor mounting screws (4).
6. Tighten the pump mounting screw (1).

NOTE: Make sure the pump is properly aligned with the damper coupling and the motor.

7. Reconnect the unit and the motor to their electrical circuit.

#### 4.4. REPLACE TEMPERATURE CONTROLLER

NOTE: Before doing any work on electrical components, disconnect the unit from its electrical circuit.

1. Dismantle the temperature controller housing.

**TIP:** Keep pictures and notes of the wire connections.

2. Remove wire connectors using a small slotted screwdriver.
3. Slide off the plastic retainer by applying pressure with a small screw driver on each side. Pull out the temperature controller of the housing.
4. Connect wires to the correct numbers on new thermostat and reassemble into housing.

NOTE: Firmly tighten the wire clamp screws. Refer to section 0 for the correct wiring.

5. Re-install the temperature controller and the plastic retainer.
6. Re-install the housing on the support plate.
7. Reconnect the unit to the electrical circuit.
8. Adjust the temperature controller, Refer to section 2.4.

#### 4.5. REPLACE TEMPERATURE CONTROLLER RELAY

NOTE: Before doing any work on electrical components, disconnect the unit from its electrical circuit.

1. Dismantle the temperature controller housing.

**TIP:** Keep pictures and notes of the wires connections.

2. Remove wire connectors using long nose pliers.
3. Remove relay mounting screws (2).
4. Connect wires to correct position on new relay and tighten the mounting screws (2).


5. TROUBLESHOOTING

OBSERVATION	CAUSE	FIX
Compressor doesn't start	Temperature controller or relay failure (temperature controller housing)	Check the output voltage on each components (2) and replace the defective part
	Relay, overload or start capacitor failure (on the compressor)	Replace relay and/or overload and/or start capacitor
	Input voltage is too low	Check input voltage, refer to specifications of the unit
	Compressor failure	Replace compressor (Has to be performed by a certified refrigeration expert)
Compressor runs but never reaches set point	Set point is too low	Adjust set point to a minimum of 27°F
	Temperature probe is not properly connected or installed	Temperature probe must be in the bottom of the reservoir and in no contact with any metallic part
	Refrigerant leak	Perform a leak test and repair the leak. Vacuum flush the refrigerant and fill with proper quantity. (Has to be performed by a certified refrigeration expert)
	Dirty condenser	Disconnect the unit. Clean the condenser using degreaser and water. Do not spill liquid on any electrical component. Be careful to not damage the aluminum fins of the condenser.
	Dusty condenser	Disconnect the unit. Clean the condenser with pressurized air.
Frozen glycol	Condenser fan malfunction	If the compressor runs but not the fan, replace the fan motor.
	Inadequate water/glycol mixture	Check mixture with a refractometer. Mixture must be between 5°F and 20°F
No outflow of the circulation line	Compressor never stops due to malfunction of the temperature controller	Check if temperature probe is properly connected, if required replace temperature controller
	Circulation line blocked	Inspect and locate blockage. Clean the lines.
	Pump failure	Replace the pump
	Damper coupling broken	Replace damper coupling


## 6. ELECTRICAL WIRING DIAGRAMS

*NEVER modify the electrical circuit of the unit. If required, ONLY use 14 AWG wire. Electrical repairs must be done by a professional electrician.*

### 6.1. ELECTRICAL DIAGRAM BEF-02 & BEF-03

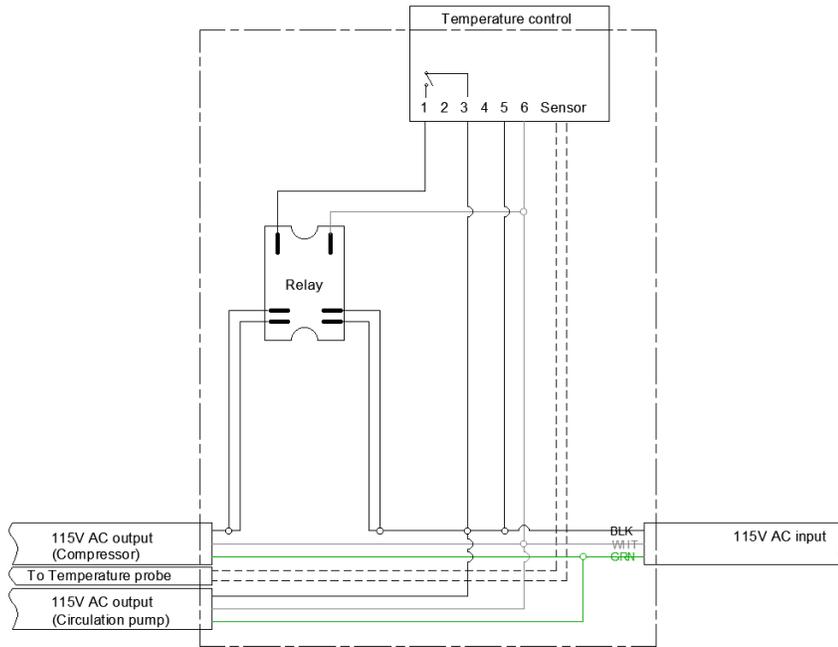

### 6.2 ELECTRICAL DIAGRAM BEF-04 , BEF-05 AND BEF-075

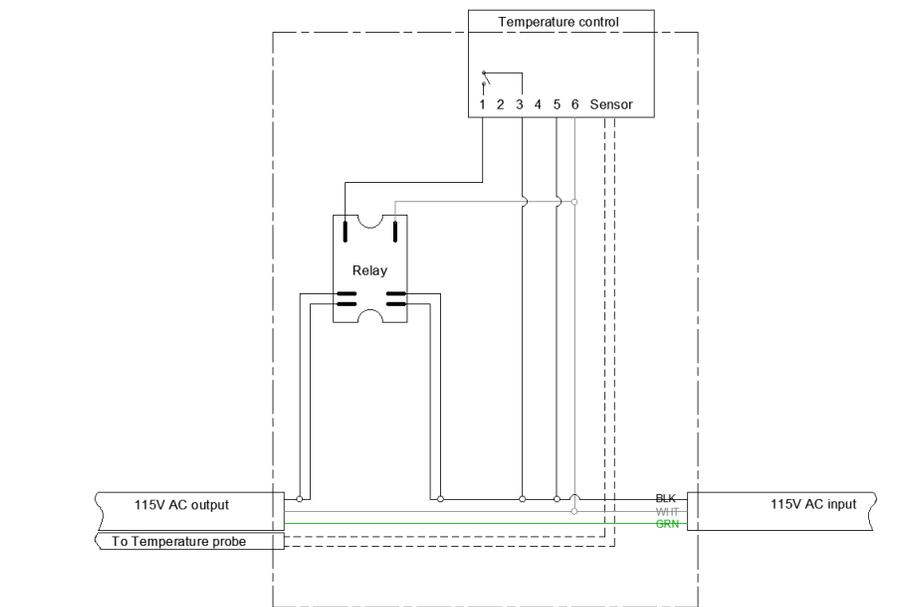

### 6.3 ELECTRICAL DIAGRAM BEF-08

